


Operation Guide 5386

CASIO®

- Your watch may differ somewhat from the one shown in the illustration.

Your watch has two independent clocks. You can set each one to a different time.

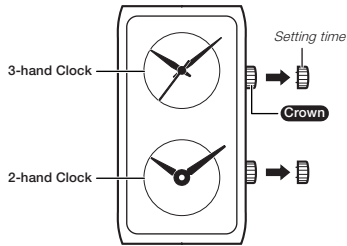

To adjust the time setting

Pull out the **Crown of clock whose time setting you want to change.**

- When adjusting the time setting of the **3-hand clock**, pull out the **Crown** when the second hand is at 12 o'clock.


Rotate the **Crown to move the hands to the time you want to set.**

- When setting the minute hand, move it four or five minutes past the setting, and then back it up to the setting you want.

To resume normal timekeeping from your setting, push the **Crown back synchronized with a time signal from a radio, computer, etc.**

Crown Operations

Some water-resistant models (100 meters, 200 meters) have a screw-in crown. When you need to perform a crown operation, rotate it towards you to unscrew it. Then pull the crown out. Avoid applying undue force when pulling. The watch loses its water resistance while the crown is unscrewed. After performing a crown operation, fully screw the crown back in.

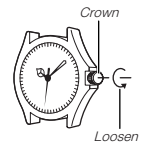

Specifications

	Accuracy at normal temperature (per month)	Battery type	Approximate Battery life
3-hand Clock	±20 seconds	SR521SW	2 years
2-hand Clock	±20 seconds	SR516SW	3 years

When the battery of the 3-hand clock goes low, its second hand will start jumping at two-second intervals. When this happens, replace its battery (Type SR521SW). Replacement of the 2-hand clock battery (Type SR516SW) is also recommended at this time.